

Anziehvorschrift für Zylinderkopf			058.700		 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for		
Instructions de serrage pour culasse			adaptable à / adaptable a		
Prescripciones de apriete para culatas			PSA		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A B 152.550 M 12x1,5x123			84159 732610		
Anziehen/ Tightening/ Serrage/ Apriete			A * 30 Nm 70 Nm ➤ 120° B * 20 Nm 60 Nm ➤ 90° ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion					
* neue Zylinderkopf-schrauben verwenden		use new cylinder head bolts		utiliser des vis neuves emplar tornillos nuevos	
★ Warmlauf (80°C)		warm up time (80°C)		chauffage (80°C) calentamiento (80°C)	
□ Schrauben einzeln lösen und wieder anziehen		loosen and tighten each bolt		deserrer et serrer vis par vis aflojar y apretar tornillo a tornillo	
● Setzzeit		relaxation time		durée de tassement tiempo de espera	
➤ Drehwinkel		torque angle		angle de serrage ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
✚ 1,45 mm, Ø 82 mm, 3 Kerben/notches/encoches/muescas					
Mot.: XUD7, 161, 161A, A9A 1,7-1,8 ltr. Diesel, 43-44 kW (58-60 PS)					
Berlingo, BX, C15, Visa, Xsara, ZX 205, 306, 309, Partner					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601				*058.700*	