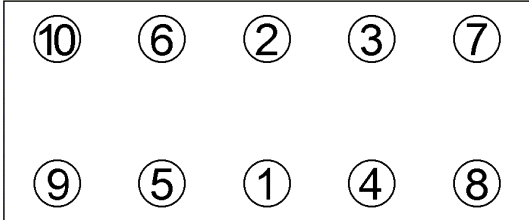


Anziehvorschrift für Zylinderkopf		076.892 passend für / suitable for adaptable à / adaptable a Opel	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 803.060 M 10 x 153				
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤ ➤ ➤	25 Nm 90° 90° 90° 45°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
✱ 0,65 mm, Ø 81,7 mm				
Mot.: A18XER, Z18XER, Z16LET/XER, A16LER/XER, Z16LEL, A16LEL, Z16LER, 939 A4.000 1,6 ltr.-1,8 ltr. 103-132 KW (140-192 PS)				
Astra H/J, Corsa D, Insignia, Meriva A Vectra C, Zafira B, Alfa 159, Fiat Croma				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*076.892*	