

Anziehvorschrift für Zylinderkopf		158.410	 Das Original		
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a Opel			
Instructions de serrage pour culasse					
Prescripciones de apriete para culatas					
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
A		B		8 4 1 5 9 7 3 2 6 10	
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	25 Nm 50 Nm 90° 90°			
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
1,7 Ltr. Diesel 1,05 mm / 3 Löcher					
Mot. Z17DT, A17DT, Z17DTR, A17DTR, A17DTC, A17DTS, A17DTJ					
Astra H, Astra J, Corsa D, Meriva A, Meriva B, Zafira B					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*158.410*		