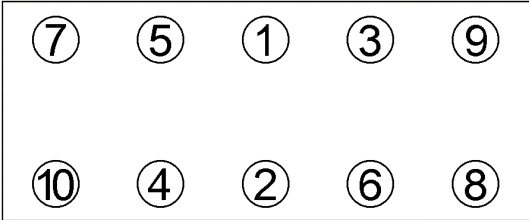


Anziehvorschrift für Zylinderkopf Tightening Instructions for Cylinder Head Instructions de serrage pour culasse Prescripciones de apriete para culatas		424.101 passend für / suitable for adaptable à / adaptable a	 Das Original
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 802.880 M 12x1,75x136			
Anziehen/ Tightening/ Serrage/ Apriete	* ● □ ➤	10 Nm 100 Nm 3 min 180° 70 Nm 120°	
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) desserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor -/1,52 mm ÷ 1,8 Ltr. Diesel, Mot.D18NA, 44 kW (60 PS) Fiesta, Escort, Orion ab 07/1992> 1,8 Ltr. Turbo-Diesel, Mot.D18T,D18TI 55/66 kW (75/90 PS) Fiesta, Escort, Orion, Sierra ab 07/1992>			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*424.101*	