

Anziehvorschrift für Zylinderkopf			761.281	 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for	
Instructions de serrage pour culasse			adaptable à / adaptable a	
Prescripciones de apriete para culatas			Ford	
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
A  B 		5 1 3 7 6 4 2 8		
804.210 M 12 x 87				
Anziehen/ Tightening/ Serrage/ Apriete	A * 40 - 55 Nm 50 - 70 Nm ● 15 min 73 - 83 Nm ★ 15 min 95 - 115 Nm	B * 35 - 40 Nm 70 - 75 Nm ● 5 min ► 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
►	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Mot. TV 24, 6 Cyl., 2,4 l V6, 92/96 kW (125/130 PS)				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*761.281*	