



Fig. 1: Assembly aid positioned correctly

- |                                   |                 |
|-----------------------------------|-----------------|
| 1 Securing ring<br>3 Release ring | 2 Mounting ring |
|-----------------------------------|-----------------|

Before installation, please ensure that the mounting ring (2) is positioned above the securing ring (1).  
 ➔ The mounting ring (2) preloads the securing ring (1).

During installation, the mounting ring (2) centers the clutch releaser towards the release ring (3). It gets pushed back and releases the securing ring (1). The securing ring snaps into place automatically and attaches the clutch releaser onto the release ring (3).



Please consider service information: Clutch Installation in Passenger Cars and Commercial Vehicles - Greasing/not greasing the guide tube (11545 EN).



[www.zf.com/serviceinformation](http://www.zf.com/serviceinformation)