Citroën / Fiat / Lancia / Peugeot

VKMA 03250

VKMA 03251










VKMC 03251

Α




- (13): Pin (CIT ref. 7014TJ/ PEU. ref. 01 53N) (FIAT. ref. 1860863000).
- (14): Pin (CIT. ref. 7017TR).
- (15): Pin (M8x70).
- (16): Pin (M8x125x40).
- (17): Pin (M8x125x35).
  - Crankshaft turning spanner (ref. 01 17EZ).
  - Flywheel locking tool (CIT. ref. 6012T) (FIAT. ref. 1867030000).
  - Flywheel locking tool (CIT. ref. 9044T).

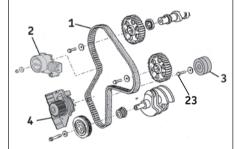


60 Nm 45 Nm 40 Nm (18)/(19) = 10 Nm

## Removal

- Disconnect the battery according to the vehicle manufacturing guidelines.
- 2) Prepare the vehicle for the timing replacement according to the vehicle manufacturing guidelines.
- 3) Remove the upper engine bracket (Citroen Evasion et Xantia - Fiat Ulysse - Peugeot 406 and 806).
- 4) Undo the lower torque rod connecting pin (Citroen Evasion and Xantia Fiat Ulysse - Peugeot 806).
- Remove the bolt (6), the nuts (7) and remove the engine bracket flange (8) (Fig. B) (Citroen XM et Peugeot 605).
- Remove the bleeding attachment on the upper timing cover (except Citroen Evasion, Xantia - Fiat Ulysse - Peugeot 406 and 806).
- Remove the upper timing cover after having removed the bolt (9) and having turned the upper attachment (10) through a guarter turn (Fig. C).
- Remove the injection pump cover (11) (Fig. B).
- Turn cylinder No. 1 to TDC by tuning the crankshaft by means of the crankshaft pulley bolt (12) (Fig. D), or using the crankshaft key (ref. 0117EZ) (Citroen Evasion - Fiat Ulysse - Peugeot 806).
- 10) Position pin (13), pin (14) for Citroen Xantia, pin (15) for Peugeot 406, in the flywheel between the starter and the solenoid (Fig. E).
- 11) Insert pin (16) through the camshaft sprocket and pin (17) through the injection pump sprocket (Fig. C) and tighten by hand.
- Remove the lower clutch housing cover.
- 13) Lock the flywheel with the locking tool (CIT ref 6012T or Fiat ref. 1867030000) for Citroen Evasion - Fiat Ulysse - Peugeot 806, locking tool (CIT ref. 9044T) for Citroen Xantia.
- Remove the bolt (12) and the crankshaft pulley (Fig. D) (handbrake applied and fourth gear engaged for Citroen XM et Peugeot 605).
- 15) Remove the lower timing system casing
- Remove the flywheel locking tool (CIT ref. 6012T or Fiat ref. 1867030000) from the flywheel (Citroen Evasion - Fiat Ulysse - Peugeot 806), locking tool (CIT ref. 9044T) (Citroen Xantia).
- Loosen the washer (18) of the tensioner roller (2)
- Loosen the bolt (19) of the tensioner roller (2) (Fig. F), passing a 5 mm hexagon socket wrench, through the engine bracket (20) (Fig. C).

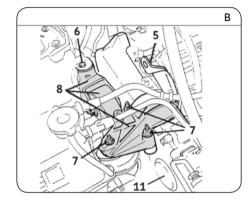


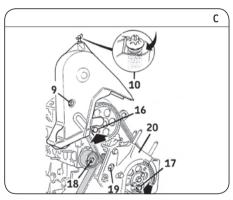


  
- 19) Slacken the tensioner roller (2), by turning the eccentric shaft (21) (Fig. F) clockwise using a 10 mm socket wrench through the bracket (20) (Fig. C)
- Remove timing belt (1), tensioner roller (2) and idler roller (3).
- Removing the water pump (VKMC 03251): firstly bleed the cooling circuit, check it is clean, and clean if required; secondly fully loosen the water pump (4) fastening bolts and remove the pump (Fig. A).







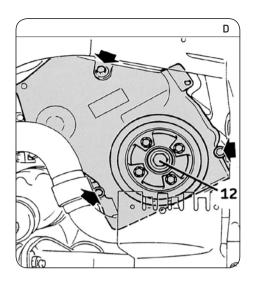





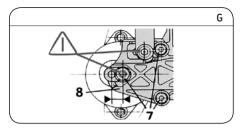

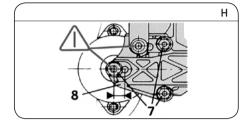

## Refitting

**Caution!** First carefully clean thoroughly the bearing surfaces of the rollers and of the tensioning device.

- 22) Refitting the water pump: firstly fit the new water pump (4), apply the torque 10 Nm to the waterpump bolts; then check that the water pump pulley runs properly, and has no hard or locking spots.
- 23) Check that the flywheel, the injection pump sprocket and cam shaft sprocket are blocked.
- 24) Refit the new tensioner roller (3) and its new bolt (23)
- 25) Refit the new tensioner roller (2) in the slackened position by blocking the nut (18) (Fig. F).
- 26) Fit the new timing belt (1) in tension, in the following order: crankshaft sprocket, idler roller, injection pump sprocket, camshaft sprocket, water pump sprocket and tensioner roller.
- 27) Turn the eccentric shaft (21) anti-clockwise of the tensioner roller (2) (Fig. F)
- 28) Loosen the nut (18) (Fig. F); the belt will tighten automatically.
- 29) Remove the timing pins.
- **30)** Turn the crankshaft by two turns in the engine rotation direction up to TDC.

- 31) Retighten the nut (18) (Fig. F) to 10 Nm.
- **32)** Turn the crankshaft though two more rotations up to TDC.
- 33) Loosen the nut (18) one turn to let the spring react.
- **34)** Tighten the nut **(18)** and the bolt **(19)** to **10 Nm** (**Fig. F**).
- **35)** Check the adjustment of the timing with the timing pins.
- 36) In the event that one of the pins cannot be refitted, restart the timing belt fitting operations from the beginning.
- **37)** To refit the elements removed, apply the reverse sequence of removal.
- 38) Citroen XM and Peugeot 605
  - Coat the crankshaft pulley attachment bolt (12)
    (Fig. D) with thread lock and tighten to 40 Nm.
  - Refit the complete flange (8) of the engine bracket in the position shown in (Fig. G) for turbo engines and in the position shown in (Fig. H) for normally-aspirated engines.
  - Refit and tighten the four nuts (7) to 45 Nm (Fig. B).
  - Refit and tighten the screw (6) to 60 Nm (Peugeot) or 45 Nm (Citroen) (Fig. B).
  - Refit and tighten the glow plugs to 23 Nm.

- **39)** Fill the cooling circuit with the permanent fluid recommended.
- 40) Check the circuit's leak-tightness when the engine reaches its running temperature and secure the level of coolant when the engine is at ambient temperature (20 °C).

Notice: Always follow the vehicle manufacturer instructions when working on the engine. The SKF KITS are designed for the automotive repair professional and must be fitted using tooling used by these professionals. These instructions are to be used as a guideline only. This document is the exclusive property of SKF. Any representation, partial or full reproduction, is forbidden without prior written consent from SKF.

® SKF is a registered trademark of the SKF Group.

© SKF Group 2014

The contents of this publication are the copyright of the publisher and may not be reproduced (even extracts) unless prior written permission is granted. Every care has been taken to ensure the accuracy of the information contained in this publication but no liability can be accepted for any loss or damage whether direct, indirect or consequential arising out of the use of the information contained herein. Any cost savings and revenue increases in this publication are based on results experienced by SKF customers and do not constitute a guarantee that any future results will be the same.

