

Cylinder Head Gasket Retightening Procedure

	Phase 1	Phase 2	Phase 3	Phase 4	Phase 5	Phase 6	Phase 7	Phase 8	Retightening
A	4 Kpm	6 Kpm	-90°+6 Kpm	90°	90°				NO
B									
C									
D									

Pounds

	Phase 1	Phase 2	Phase 3	Phase 4	Phase 5	Phase 6	Phase 7	Phase 8	Retightening
A	29 lbft	43 lbft	-90°+43 lbft	90°	90°				NO
B									
C									
D									

Note A


Note B

Note C

Note D

	1	2	3	4	5	6
Reference	10103100	10103110	10103120			
Piston	0.66-0.86	0.87-0.90	0.91-1.02			

Tightening order

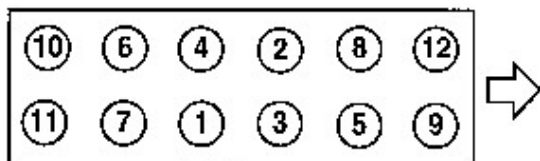

Symbol	Explanation
- 90° +	LOOSEN 90° AND TIGHTEN THE CYL. HEAD BOLTS ONE BY ONE FOLLOWING THE SPECIFIED TIGHTENING AND ORDER.
< >	TURN THE ENGINE UNTIL THERMOSTAT IS COMPLETELY OPEN. LET ENGINE COOL DOWN FOR 4 HOURS (WITH OPEN BONNET). OPEN THE FILLER CUP OF THE COOLING WATER CIRCUIT EXPANSION VASE.
Retightening	IF A RETIGHTENING IS NECESSARY: LOOSEN 90° AND TIGHT AGAIN THE CYL. HEAD BOLTS ONE BY ONE FOLLOWING THE ORDER AND LAST TIGHTENING SPECIFIED. THIS OPERATION SHOULD BE CARRIED OUT BETWEEN 1000 AND 1500 KM.