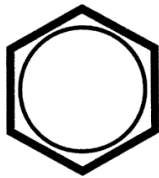
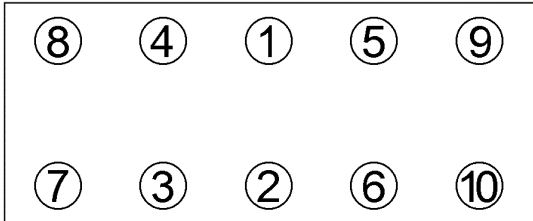


Anziehvorschrift für Zylinderkopf		025.440 passend für / suitable for adaptable à / adaptable a Renault, Volvo	 Das Original
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete	
 156.700 M12x1,75x157			
Anziehen/ Tightening/ Serrage/ Apriete	* ● ➤	Renault: 20 Nm 60 Nm 3 min 150°	Volvo: * 20 Nm 60 Nm ➤ 130°
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ □ ● ➤	neue Zylinderkopf-schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage
	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro		
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 85 mm			
Mot: N7Q 700,704,710,711,B4184S/S3, B4204S/T			
1,8 - 2,0 Ltr. 16 V			
Laguna, Safrane, S40, V40			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*025.440*	