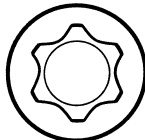
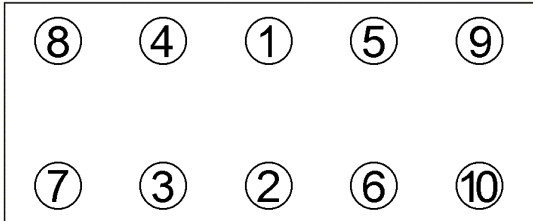


Anziehvorschrift für Zylinderkopf		075.880		 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for			
Instructions de serrage pour culasse		adaptable à / adaptable a			
Prescripciones de apriete para culatas		Citroën, Peugeot			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
					
267.550 M 12x1,5x126					
Anziehen/ Tightening/ Serrage/ Apriete	* ➤	20 Nm 60 Nm 220°			
Zeichenerklärung / Explanations / Explication / Explicacion					
✱	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos	
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)	
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo	
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera	
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
✱ 1,6 mm, Ø 86 mm					
Mot.: DW10 TD/UTD/ATED/BTED, RHS, RHV, RHX, RHZ 2,0 Ltr. HDi Diesel					
Berlingo, C5, Evasion, Jumper, Jumpy, Xantia, Xsa Scudo, Ulysse, Zeta, 206, 306, 307, 406, 407, 607 Expert, Partner, Grand Vitara					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*075.880*		