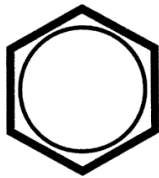
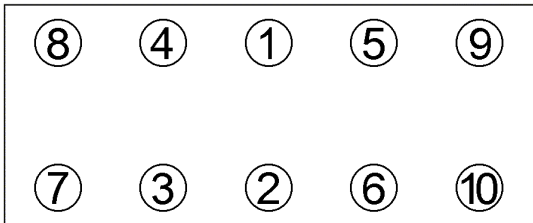


Anziehvorschrift für Zylinderkopf		118.020 passend für / suitable for adaptable à / adaptable a Renault	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
111.630 M 10 x 100				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm ➤ 90°±4° ● 3 min ☐ 20 Nm + 90°±4°			
Zeichenerklärung / Explanations / Explication / Explicacion				
* ★ ☐ ● ➤	neue Zylinderkopfschrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 75 mm; ÷: 1,75 mm				
Mot: C3G 700,702,710,712,720				
1,2 Ltr. 40 KW (55 PS)				
Rapid, Twingo				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*118.020*		