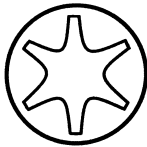
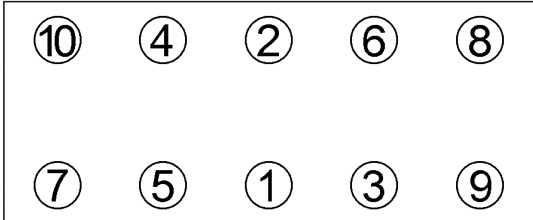


Anziehvorschrift für Zylinderkopf		123.473		
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a		
		Ford		
		Das Original		
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete				
				
802.870 M 10 x 102				
Anziehen/ * 20-30 Nm Tightening/ 40-50 Nm Serrage/ ➤ 90°-120° Apriete				
Zeichenerklärung / Explanations / Explication / Explicacion				
✳	neue Zylinderkopf-schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
☐	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 81,6 mm; 1/4: 0,64 mm				
MC: EYDB;EYDC;EYDD;EYDE;EYDFEYDG;EYDI;EYDJ EYDL;EYPA;EYPC;RKB;RKF;RKH;RKJ;RKK 1,8 ltr. Zetec 85 KW (115 PS)				
Focus 11/98➔ Transit Connect 05/02➔				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*123.473*	