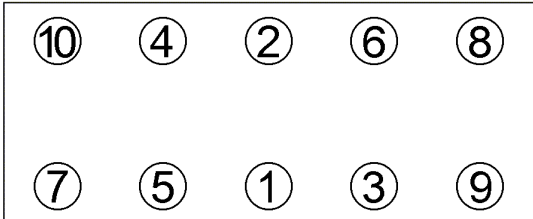


Anziehvorschrift für Zylinderkopf		123.482 passend für / suitable for adaptable à / adaptable a Ford	 Das Original	
Tightening Instructions for Cylinder Head				
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
 802.870 M 10 x 102				
Anziehen/ Tightening/ Serrage/ Apriete		* 20 Nm 40 Nm ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion				
*	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 86 mm; $\frac{1}{8}$: 0,60 mm				
Mot: EDBA;EDBB;EDBC;EDBD;EDDB;EDDC;EDDD EDDF;HMDA;NGA;NGB;NGC;NGD;YF 2,0 ltr. Zetec; 91-100 KW (124-136 PS) Focus 01/1999➔; Mondeo 01/1999➔10/2000 Maverick 09/2002➔; Mazda Tribute 03/2000➔				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*123.482*	