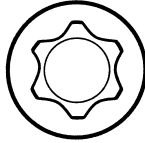
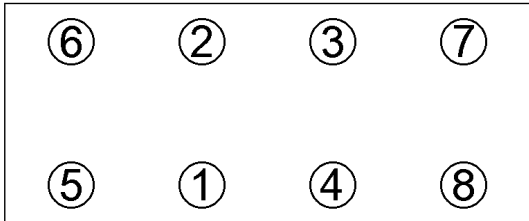


Anziehvorschrift für Zylinderkopf		123.691	 Das Original	
Tightening Instructions for Cylinder Head		passend für / suitable for adaptable à / adaptable a PSA/Renault		
Instructions de serrage pour culasse				
Prescripciones de apriete para culatas				
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
				
152.570 M 10x1,5x148				
Anziehen/ Tightening/ Serrage/ Apriete	* 20 Nm □ 15 Nm ➤ 225°			
Zeichenerklärung / Explanations / Explication / Explicacion				
✳	neue Zylinderkopf- schrauben verwenden	use new cylinder head bolts	utiliser des vis neuves	emplar tornillos nuevos
★	Warmlauf (80°C)	warm up time (80°C)	chauffage (80°C)	calentamiento (80°C)
□	Schrauben einzeln lösen und wieder anziehen	loosen and tighten each bolt	deserrer et serrer vis par vis	aflojar y apretar tornillo a tornillo
●	Setzzeit	relaxation time	durée de tassement	tiempo de espera
➤	Drehwinkel	torque angle	angle de serrage	ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor				
Ø: 89 mm; $\frac{1}{8}$: 1,85 mm links/left/gauche/izquierda				
Mot: ES9J4, LFZ, L7X 700, 701, 713, 727				
3,0 Ltr. V6 24V; 150 KW (190 PS)				
Xantia, XM, 406, 605, Espace, Laguna, Safrane				
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*123.691*	