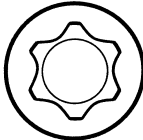
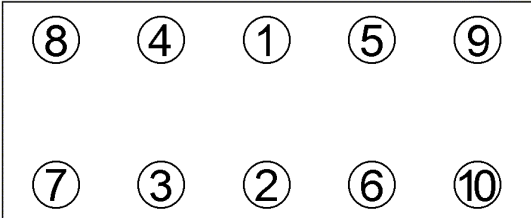


Anziehvorschrift für Zylinderkopf			130.642		 Das Original
Tightening Instructions for Cylinder Head			passend für / suitable for		
Instructions de serrage pour culasse			adaptable à / adaptable a		
Prescripciones de apriete para culatas			Citroën, Peugeot		
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo			Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete		
					
152.550 M 12x1,5x123					
Anziehen/ Tightening/ Serrage/ Apriete	* ➤ ➤	20 Nm 60 Nm 90° 90°			
Zeichenerklärung / Explanations / Explication / Explicacion					
* ★ □ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage	emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro	
Motortyp / Engine type / Type de moteur / Tipo de motor					
✚ 1,26 mm, Ø 84 mm, 1 Loch/hole/trou/agujero					
Mot.: DW8, DW8B, 1WZ, WJY, WJZ 1,9 Ltr. Diesel 44-51 KW					
Berlingo, C15, Jumpy, Xsara, 206, 207, 306, Expert, Partner Fiat Scudo, Toyota Corolla					
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601			*130.642*		