FITTING INSTRUCTIONS


FITTING INSTRUCTIONS



FIO15EU Volkswagen Passat 88



Removal of a rear shock absorber

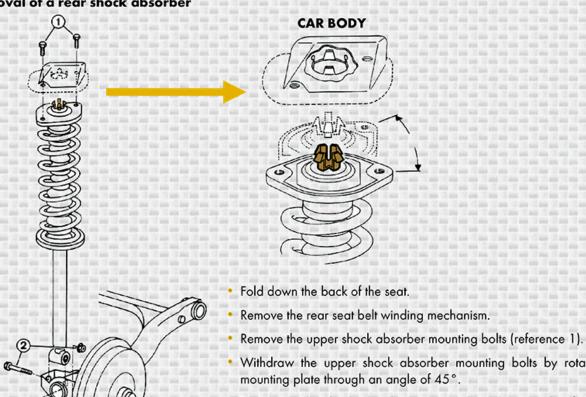

- Withdraw the upper shock absorber mounting bolts by rotating the upper
- To remove the shock absorber, rotate it through an angle of 45° in order to disengage the top fixing lugs.

