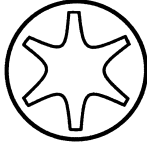
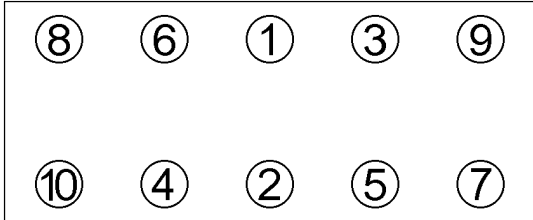


Anziehvorschrift für Zylinderkopf		476.602	
Tightening Instructions for Cylinder Head			
Instructions de serrage pour culasse			
Prescripciones de apriete para culatas			
Schraubenkopf / Head shape Tête de vis / Cabeza de tornillo		passend für / suitable for adaptable à / adaptable a	
		Ford	
		Das Original	
Anziehreihenfolge/Tightening sequence/Ordre de serrage/Orden de apriete			
			
087.830 M 10 x 143			
Anziehen/ Tightening/ Serrage/ Apriete	* 15 Nm 30 Nm ➤ 90°		
Zeichenerklärung / Explanations / Explication / Explicacion			
* ★ ☐ ● ➤	neue Zylinderkopf- schrauben verwenden Warmlauf (80°C) Schrauben einzeln lösen und wieder anziehen Setzzeit Drehwinkel	use new cylinder head bolts warm up time (80°C) loosen and tighten each bolt relaxation time torque angle	utiliser des vis neuves chauffage (80°C) deserrer et serrer vis par vis durée de tassement angle de serrage emplar tornillos nuevos calentamiento (80°C) aflojar y apretar tornillo a tornillo tiempo de espera ángulo de giro
Motortyp / Engine type / Type de moteur / Tipo de motor			
Ø: 77 mm; $\frac{1}{8}$: 0,5 mm			
Mot: FHA; FHD; FHE; FHF; FXDA; FXDB; FXDC; FXDD FXJA; FXJB			
1,4 Ltr. Zetec 55-66 KW (75-90 PS)			
Fiesta; Focus; Puma; Fusion			
ElringKlinger AG, Max-Eyth-Str.2 72581 Dettingen / Erms. Tel. 07123/724 601		*476.602*	